



# ULTIMATE CAN FILTER


## SCENIC III

### Installation:

1. Remove dashboard from car and open back cover to get full access to dashboard PCB.



2. Change mileage in 24C16 eeprom.
3. Remove and discard electronic component showed in the photo. This component will be not soldered back to the PCB anymore.

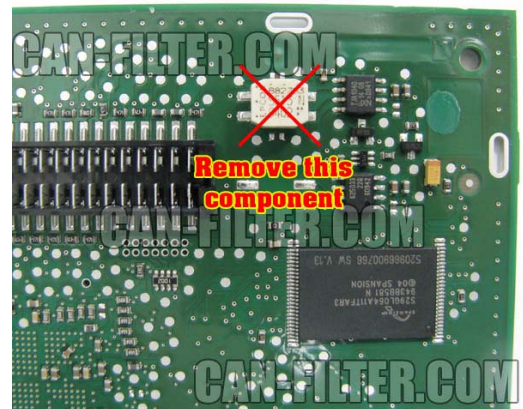

4. Connect **Ultimate Can Filter** with dashboard PCB using 6 wires, as you can see in the photos below. **Remember to make bridge on Reno Points.**

